



*Sourcing & Service*

## KOMATSU

### Engine Valve/Guide/Seat/Spring



- All manufacturers's numbers, names, symbols and description are used for reference purposes and it is not implied that any parts listed is the products of those manufacturers.
- Komatsu is a registered trademarks of Komatsu Ltd.

**Engine Valve/Guide/Seat For KOMATSU**



# Engine Valve for KOMATSU



Engine Code	Vehicle Model Chassis Type	O.E. Part NO.	IN EX						
				HD	OL	SD	SA	HS	CG
<b>4D92</b> <b>4D94</b>		6140-41-4111	IN	40.0	134.0	9.0	45°		
		6140-42-4210 6140-41-4211	EX	35.0	134.0	9.0	45°		
<b>4D95-1AA/1BB</b> <b>4D95-1K/1L</b> <b>4D95L-1GG/W/BW</b> <b>4D95L-E-2A</b> <b>4D95-L-W-1</b> <b>4D95S-1H/1J</b> <b>4D95S-W-1G-E</b> <b>6D95L-1</b> <b>6D95L-1AF-1</b> <b>S4D95LE-3A-2</b>	S=Turbo Charge Excavator:PC60-6,PC120-3,PC100/120-5,PC200-5,PC200-6 Bull-Dozer:D31E,S18,D31P,S20 Wheel Loader:WA180-1	6207-41-4110 6204-41-4110	IN	44.0	128.0	8.0	45°		
		6204-41-4210	EX	38.0	128.0	8.0	45°		
<b>S4D95L-1A/1B/1C</b> <b>S4D95L-1K</b> <b>S6D95L-1</b> <b>S6D95L-1MM</b> <b>S6D95L-1NN/1PP</b> <b>SA6D95L-1</b> <b>SA6D95LE-1A/1B/1C</b>	S=Turbo Charge A=After cooled Excavator:PC60-6,PC120-3,PC100/120-5,PC200-5,PC220-5,PC200-6,PC220-6 Bull-Dozer:D31E,S18,D31P,S20 Wheel Loader:WA180-1	6209-41-4110	IN	44.0	128.0	8.0	60°		
		6209-41-4210	EX	38.0	128.0	8.0	45°		
<b>S4D102E-1</b> <b>S6D102E-1AA</b> <b>S6D102E-1AB</b> <b>SA4D102E-1AB</b> <b>SA6D102E-1AA</b> <b>SA6D102E-1AB</b> <b>SA6D102E-1AC</b> <b>SAA4D102E-2B</b> <b>SAA6D102E-2</b>	S=Turbo Charge A=After cooled Excavator:PC100/120-6,PC200-6,PC220-6	6736-41-4110	IN						
		6736-41-4210	EX						
<b>4D105-3C</b> <b>S4D105-1</b> <b>S4D105-2</b> <b>S4D105-3</b>	Bull-Dozer:D40/45A,P,S-1	6130-41-4131 6131-42-4210 6130-41-4121	IN	46.0	150.5	10.0	45°		
		6130-41-4210	EX	40.0	150.5	10.0	45°		
<b>4D105-5H/5J/5T</b> <b>6D105-1</b> <b>S4D105-5A</b> <b>S4D105-5B</b> <b>S6D105-1</b>	Excavator:PC200/220-3 Bull-Dozer:D40/45A,P,S-1,D41A,P,S-3 Wheel Loader:WA200-1,WA250-1	6136-41-4110 6138-41-4110	IN	46.1	145.5	9.95	60°		
		6136-41-4210 6136-41-4211	EX	40.1	145.5	9.92	45°		
<b>SA6D108-1</b>	Excavator:PC300-5 Bull-Dozer:D57S 1B	6221-41-4110	IN	49.5	148.5	8.95	60°		
		6221-41-4211/10 Stem Chromed	EX	44.1	148.5	8.93	45°		

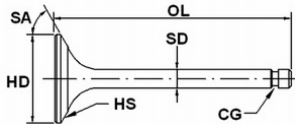
 
 
 

 

 

# Engine Valve for KOMATSU



Engine Code	Vehicle Model Chassis Type	O.E. Part NO.	IN EX						
				HD	OL	SD	SA	HS	CG
<b>S6D110-1</b> <b>SA6D110-1</b>	Excavator:PC280-3 Wheel Loader:WA350-1B,WA380-1,WA400-1	6138-42-4110	IN	47.0	148.5	9.0			
		6136-42-4211	EX	41.0	148.5	9.0			
<b>S4D120</b> <b>4D120</b>	Bull-Dozer:D55S-3 7240cc	6110-41-4110 6110-43-4110	IN	53.0	172.0	11.0	45°		
		6110-41-4210 6110-43-4210	EX	49.0	173.0	11.0	45°		
<b>6D125-1</b> <b>S6D125-1</b> <b>SA6D125-1</b>	S=Turbo Charge A=After cooled Bull Dozer : D75A-1/S5 , D65EX/PX-12, D83,D85 Excavator : PC300	6150-41-4111	IN	45.0	169.5	9.0	60°		
		6150-41-4210	EX	44.0	169.5	9.0	45°		
<b>6D125E-2</b> <b>S6D125E-2</b> <b>SA6D125E-2</b> <b>SA6D125E-3B-7</b> <b>SAA6D125E-3</b>		6150-42-4110	IN						
		6150-42-4210	EX						
<b>4D130-1</b>	Bull-Dozer:D53A-16,D53S-17, D57S-1 8490cc(4cyls.)	6114-41-4110	IN	53.0	172.0	11.0	45°		
		6114-41-4210	EX	49.0	173.0	11.0	45°		
<b>S6D140-1</b> <b>SA12V140-1</b> <b>SA6D140-1</b> <b>SDA12V140-1</b>	Excavator:PC650-3,PC750-5/6, PC1600-1 Bull-Dozer:D135A-2,D155AX-3, D465A-2,D4751-3 Wheel Loader:WA500-1, WA800-2	6215-41-4110 Nitrided	IN	52.0	169.3	9.95	60°		
		6215-41-4212	EX	49.65	169.3	9.90	60°		
<b>4D155</b> <b>6D155</b> <b>S6D155-4</b> <b>SA6D155-4</b>	Bull-Dozer:D150,D155A-1, D155S-1,D355A-1 19260cc(6 cyls.)	6127-41-4112 6127-41-4113 Stem Chromed	IN	56.0	212.5	10.9	60°		
		6127-41-4214 6127-41-4212	EX	52.9	212.5	10.9	45°		
<b>SA6D170-1</b> <b>SA8V170-1</b> <b>SA12V170-1</b>	Bull-Dozer:D375A-1 Wheel Loader:WA600	6162-43-4110	IN	57.0	196.5	12.0	60°		
		6162-43-4210 6164-41-4210 6164-41-4211	EX	56.0	196.5	12.0	45°		

# Engine Valve for KOMATSU



Engine Code	Vehicle Model Chassis Type	O.E. Part NO.	IN EX						
				HD	OL	SD	SA	HS	CG
<b>NH220-C1</b>	Bull-Dozer:D80A-12,D85A-12 12170cc(6 cyls.)	6610-41-4110	IN	44.2	179.3	10.2	60°		
		6610-41-4210	EX	44.2	179.3	10.2	60°		
<b>NH250 NT855-1 NTA855-1</b>	Bull-Dozer:D80A,E18,D85A,E18	6712-41-4110	IN	47.6	179.5	11.5	60°		
		6710-41-4210	EX	47.6	179.5	11.5	60°		

# Valve Guide for KOMATSU



Engine Code	Vehicle Model Chassis Type	O.E. Part NO.	Inlet Exhaust	Remark
<b>2D92 . 4D92</b>	D20A . D21A	6140-19-1310		
<b>4D94 . 6D94</b>		6142-19-1310		
<b>4D95-1AA/1BB 4D95-1K/1L 4D95L-1GG/W/BW 4D95L-E-2A 4D95-L-W-1 4D95S-1H/1J 4D95S-W-1G-E 6D95L-1 6D95L-1AF-1 S4D95LE-3A-2 S4D95L-1A/1B/1C S4D95L-1K S6D95L-1 S6D95L-1MM S6D95L-1NN/1PP SA6D95L-1 SA6D95LE-1A/1B/1C</b>	S=Turbo Charge A=After cooled Excavator:PC60-6,PC120-3,PC100, PC120-5,PC200-5,PC220-5, PC200-6,PC220-6 Bull-Dozer:D31E,S18,D31P,S20 Wheel Loader:WA180-1	6204-19-1310 (6204-19-1311) (6204-19-1312)	IN & EX	Suit for the valve: 6207-41-4110(IN) 6204-41-4110(IN) 6209-41-4110(IN) 6204-41-4210(EX) 6209-41-4210(EX)
<b>S4D102E-1 S6D102E-1AA S6D102E-1AB SA4D102E-1AB SA6D102E-1AA SA6D102E-1AB SA6D102E-1AC SAA4D102E-2B SAA6D102E-2</b>	S=Turbo Charge A=After cooled Excavator:PC100/120-6,PC200-6, PC220-6	6736-19-1310 (Thick Wall)	IN	Suit for the valve: 6736-41-4110
		6736-19-1410 (Thick Wall) 6736-18-1310 (Thin Wall)	EX	Suit for the valve: 6736-41-4210
<b>4D105-3C S4D105-1 S4D105-2 S4D105-3</b>	Excavator:PC200/220-3 Bull-Dozer:D40/45A,P,S-1,D41A,P,S-3 Wheel Loader:WA200-1,WA250-1	6130-19-1310	IN & EX	Suit for the valve: 6130-41-4131 6131-42-4210 6130-41-4210(EX)
<b>4D105-5H/5J/5T 6D105-1 S4D105-5A S4D105-5B S6D105-1</b>	Excavator:PC200/220-3 Bull-Dozer:D40/45A,P,S-1,D41A,P,S-3 Wheel Loader:WA200-1, WA250-1	6136-19-1331	IN & EX	Suit for the valve: 6136-41-4110(IN) 6136-41-4210 6136-41-4211
<b>4D105-5H/5T 6D105-1 S6D105-1</b>	Excavator:PC200/220-3 Bull-Dozer:D40/45A,P,S-1,D41A,P,S-3 Wheel Loader:WA200-1, WA250-1	6136-19-1430	IN & EX	Suit for the valve: 6136-42-4110(IN) 6136-42-4211
<b>S6D108-1 SA6D108-1 SAA6D108E-2A</b>	Excavator:PC300-5 Bull-Dozer:D57S 1B	6221-19-1311	IN & EX	Suit for the valve: 6221-41-4110(IN) 6211-41-4110(IN) 6221-43-4110(IN) 6221-41-4211/10 6211-41-4211 6221-43-4210
<b>S6D110-1 SA6D110-1</b>	Excavator:PC280-3 Wheel Loader:WA350-1B,WA380-1, WA400-1	6136-19-1430	IN & EX	Suit for the valve: 6138-42-4110(IN) 6136-42-4211
<b>S4D120 4D120</b>	Bull-Dozer:D55S-3 7240cc	6110-13-1311	IN & EX	Suit for the valve: 6110-41-4110 6110-43-4110(IN) 6110-41-4210 6110-43-4210(EX)

# Valve Guide for KOMATSU



Engine Code	Vehicle Model Chassis Type	O.E. Part NO.	Inlet Exhaust	Remark
<b>6D125-1</b> <b>S6D125-1</b> <b>SA6D125-1</b>	S=Turbo Charge A=After cooled Bull Dozer : D75A-1/S5 , D65EX/PX-12, D83,D85 Excavator : PC300	6150-12-1341	IN	Suit for the valve: 6150-41-4111(IN) 6150-41-4210
		6150-12-1351	EX	
<b>4D130-1</b>	Bull-Dozer:D53A-16,D53S-17.D57S-1 8490cc(4cyls.)	6110-13-1311	IN & EX	Suit for the valve: 6114-41-4110(IN) 6114-41-4210
<b>S6D140-1</b> <b>SA12V140-1</b> <b>SA6D140-1</b> <b>SDA12V140-1</b>	Excavator:PC650-3,PC750-5/6,PC1600-1 Bull-Dozer:D135A-2,D155AX-3, D465A-2,D4751-3	6212-16-1440	IN & EX	Suit for the valve: 6215-41-4110(IN) 6215-41-4212
<b>4D155</b> <b>6D155</b> <b>S6D155-4</b> <b>SA6D155-4</b>	Bull-Dozer:D150,D155A-1,D155S-1, D355A-1 19260cc(6 cyls.)	6127-11-1341	IN & EX	Suit for the valve: 6127-41-4112(IN) 6127-41-4113(IN) 6127-41-4214 6127-41-4212
<b>SA6D170-1</b> <b>SA8V170-1</b> <b>SA12V170-1</b>	Bull-Dozer:D375A-1 Wheel Loader:WA600	6162-16-1341	IN & EX	Suit for the valve: 6162-43-4110(IN) 6162-43-4210 6164-41-4210 6164-41-4211
<b>6D170</b>	Bull-Dozer:D375A-1 Wheel Loader:WA600	6062-13-1341(OLD)	IN & EX	
<b>NH220-C1</b>	Bull-Dozer:D80A-12,D85A-12 12170cc(6 cyls.)	6610-11-1310 6610-11-1311	IN & EX	Suit for the valve: 6610-41-4210(EX)
<b>NH250</b> <b>NT855-1</b> <b>NTA855-1</b>	Bull-Dozer:D80A,E18,D85A,E18	6710-11-1311	IN & EX	Suit for the valve: 6712-41-4110(IN) 6710-41-4210(EX)

# Valve Seat for KOMATSU



Engine Code	Vehicle Model Chassis Type	O.E. Part NO.	Inlet Exhaust	Remark
<b>4D95-1AA/1BB</b> <b>4D95-1K/1L</b> <b>4D95L-1GG/W/BW</b> <b>4D95L-E-2A</b> <b>4D95-L-W-1</b> <b>4D95S-1H/1J</b> <b>4D95S-W-1G-E</b> <b>6D95L-1</b> <b>6D95L-1AF-1</b> <b>S4D95LE-3A-2</b>	S=Turbo Charge Excavator:PC60-6,PC120-3,PC100, PC120-5,PC200-5,PC200-6 Bull-Dozer:D31E,S18,D31P,S20 Wheel Loader:WA180-1	6207-11-1430	IN	Suit for the valve: 6207-41-4110 6204-41-4110
		6204-11-1440	EX	Suit for the valve: 6204-41-4210
<b>S4D95L-1A/1B/1C</b> <b>S4D95L-1K</b> <b>S6D95L-1</b> <b>S6D95L-1MM</b> <b>S6D95L-1NN/1PP</b> <b>SA6D95L-1</b> <b>SA6D95LE-1A/1B/1C</b>	S=Turbo Charge A=After cooled Excavator:PC60-6,PC120-3,PC100, PC120-5,PC200-5,PC220-5, PC200-6,PC220-6 Bull-Dozer:D31E,S18,D31P,S20 Wheel Loader:WA180-1	6209-11-1430	IN	Suit for the valve: 6209-41-4110
		6207-11-1440	EX	Suit for the valve: 6209-41-4210
<b>S4D102E-1</b> <b>S6D102E-1AA</b> <b>S6D102E-1AB</b> <b>SA4D102E-1AB</b> <b>SA6D102E-1AA</b> <b>SA6D102E-1AB</b> <b>SA6D102E-1AC</b> <b>SAA4D102E-2B</b> <b>SAA6D102E-2</b>	S=Turbo Charge A=After cooled Excavator:PC100/120-6,PC200-6 ,PC220-6	6732-11-1180	IN	Suit for the valve: 6736-41-4110
		6732-11-1170	EX	Suit for the valve: 6736-41-4210
<b>4D105-3C</b> <b>S4D105-1</b> <b>S4D105-2</b> <b>S4D105-3</b>	Bull-Dozer:D40/45A,P,S-1	6131-12-1310	IN	Suit for the valve: 6130-41-4131 6131-42-4210
		6130-11-1323	EX	6130-41-4210(EX)
<b>4D105-5H/5J/5T</b> <b>6D105-1</b> <b>S4D105-5A</b> <b>S4D105-5B</b> <b>S6D105-1</b>	Excavator:PC200/220-3 Bull-Dozer:D40/45A,P,S-1,D41A,P,S-3 Wheel Loader:WA200-1,WA250-1	6136-11-1311	IN	Suit for the valve: 6136-41-4110(IN) 6136-41-4210
		6134-11-1320	EX	6136-41-4211
<b>4D105-5H/5T</b> <b>6D105-1</b> <b>S6D105-1</b>	Excavator:PC300-5 Bull-Dozer:D57S 1B	6136-12-1310	IN	Suit for the valve: 6136-42-4110(IN) 6136-42-4211
		6136-12-1320	EX	6136-42-4211
<b>S6D108-1</b> <b>SA6D108-1</b> <b>SAA6D108E-2A</b>	Excavator:PC300-5 Bull-Dozer:D57S 1B	6221-13-1360	IN	Suit for the valve: 6221-41-4110(IN) 6211-41-4110(IN) 6221-43-4110(IN) 6221-41-4211/10
		6221-11-1320	EX	6211-41-4211 6221-43-4210
<b>S6D110-1</b> <b>SA6D110-1</b>	Excavator:PC280-3 Wheel Loader:WA350-1B, WA380-1,WA400-1	6138-12-1310	IN	Suit for the valve: 6138-42-4110(IN) 6136-42-4211
		6136-12-1320	EX	6136-42-4211
<b>6D125-1</b> <b>S6D125-1</b> <b>SA6D125-1</b>	S=Turbo Charge A=After cooled Bull Dozer : D75A-1/S5 , D65EX/PX- 12, D83,D85 Excavator : PC300	6151-11-1330	IN	Suit for the valve: 6150-41-4111(IN) 6150-41-4210
		6150-11-1320	EX	6150-41-4210
<b>4D130-1</b>	Bull-Dozer:D53A-16,D53S-17.D57S-1 8490cc(4cyls.)	6114-11-1180	IN	Suit for the valve: 6114-41-4110(IN) 6114-41-4210
		6110-13-1311	EX	6114-41-4210



# Valve Seat for KOMATSU



Engine Code	Vehicle Model Chassis Type	O.E. Part NO.	Inlet Exhaust	Remark
<b>S6D140-1</b> <b>SA12V140-1</b> <b>SA6D140-1</b> <b>SDA12V140-1</b>	Excavator:PC650-3,PC750-5/6,PC1600-1 Bull-Dozer:D135A-2,D155AX-3,D465A-2,D4751-3 Wheel Loader:WA500-1,WA800-2	6210-11-1330	IN	Suit for the valve: 6215-41-4110(IN) 6215-41-4212
		6210-11-1321	EX	
<b>4D155</b> <b>6D155</b> <b>S6D155-4</b> <b>SA6D155-4</b>	Bull-Dozer:D150,D155A-1,D155S-1,D355A-1 19260cc(6 cyls.)	6127-11-1335	IN	Suit for the valve: 6127-41-4112(IN) 6127-41-4113(IN) 6127-41-4214 6127-41-4212
		6127-11-1325	EX	
<b>SA6D170-1</b> <b>SA8V170-1</b> <b>SA12V170-1</b>	Bull-Dozer:D375A-1 Wheel Loader:WA600	6162-15-1370	IN	Suit for the valve: 6162-43-4110(IN) 6162-43-4210 6164-41-4210 6164-41-4211
		6162-13-1322	EX	
<b>NH220-C1</b>	Bull-Dozer:D80A-12,D85A-12 12170cc(6 cyls.)			Suit for the valve: 6610-41-4210(EX)
		6610-11-1220	EX	
<b>NH250</b> <b>NT855-1</b> <b>NTA855-1</b>	Bull-Dozer:D80A,E18,D85A,E18	6711-11-1120	IN	Suit for the valve: 6712-41-4110(IN) 6710-41-4210(EX)
		6710-11-1120	EX	



**S6D155**  
Valve Spring  
6127-41-4410



**S6D110**  
Valve Spring  
6136-42-4410



**S6D105**  
Valve Spring  
6136-41-4410